



| BSM200 SPAR PARTS LIST | | |
|------------------------|---------------------|-----|
| ITEM NO | DESCRIPTION | QTY |
| 1 | Motor housing | 1 |
| 2 | Filter mesh | 1 |
| 3 | Retainer | 1 |
| 4 | Air Pipe Connector | 1 |
| 5 | Seal ring | 1 |
| 6 | Vacuum motor | 1 |
| 7 | Suction pad | 1 |
| 8 | Sealing Ring | 1 |
| 9 | Connector | 1 |
| 10 | Pressure gauge | 1 |
| 11 | Middle plate | 1 |
| 12 | Motor switch | 1 |
| 13 | Cord connector | 1 |
| 14 | Nylon block | 1 |
| 15 | Hex bolt | 2 |
| 16 | Vacuum nozzle | 1 |
| 17 | Hex socket bolt | 1 |
| 18 | Suction head, big | 1 |
| 19 | Rubber cushion | 1 |
| 20 | Suction head, small | 1 |
| 21 | Stop grip | 1 |
| 22 | Capacitor | 1 |
| 23 | Connector Post | 2 |
| 24 | Philips Head bolt | 2 |
| 25 | Philips Head bolt | 8 |
| 26 | Hex socket bolt | 8 |

| | | |
|----|---------------------|---|
| 27 | Washer | 8 |
| 28 | Spring washer | 8 |
| 29 | Power cord | 1 |
| 30 | Side cover plate | 2 |
| 31 | Philips Head bolt | 8 |
| 32 | Handle upper | 2 |
| 33 | Lock pin | 2 |
| 34 | Spring Clip | 2 |
| 35 | Rubber grip | 2 |
| 36 | Foam cushion | 1 |
| 37 | Handle lower | 4 |
| 38 | Air Pipe | 1 |
| 39 | Lock pin | 2 |
| 40 | GFCI | 1 |
| 41 | Return valve spring | 1 |
| 42 | Philips Head bolt | 4 |
| 43 | Grounding wire | 1 |